

How Do I Connect My Topfield Receiver?

[See diagram below]

1. The satellite dish cable needs to have a screw connector on it called an 'F' connector. This screws onto the "LNB in" threaded fitting at the rear of the receiver. Be sure the power is off.
2. Next connect a TV lead from the "RF out" plug on the rear of the receiver to the "aerial in" socket on the rear of your TV or VCR.
If you also have an ordinary aerial, plug that into The RF in at the rear of the receiver.
3. Now plug the receiver into the power, turn power on and wait for 10 seconds. Make sure the light on the front panel is green. Press 'on/off' on remote if necessary.
4. Now tune your TV or VCR into the desired channel.
5. Note: Receiver output is in UHF frequency.
6. Note: Receiver can also be connected via AV inputs with correct cable.

