


Serial Cable connection

1. Connect the STB to PC with serial cable. The serial cable should have the following connection at both terminals.

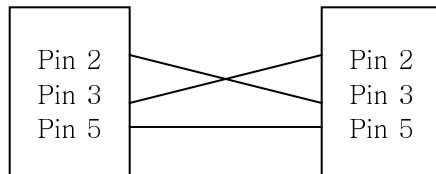

2. Execute STB manager and setup the serial port with "Port Setup" menu.

Note: When transferring data STB to STB pin connections should be straight through.

