

Topfield Receiver Basics Guide

How do I get to the Games?

1. Press the 'MENU' button on the remote.
2. Scroll down the menu list to GAMES using the down arrow on the remote.
3. Press 'OK' on the remote.
4. Scroll to your game and select using 'OK'
5. Use the 'OK' and the Arrow keys to play your game.

How do I get Teletext?

1. Press the RED button on the remote until the box on the TV screen says TELETEXT.
[usually about 3 times]
2. Press 'OK' on the remote.
3. Use number keys to navigate as per usual.
4. To exit press 'EXIT' on remote.

How do I get the radio stations?

1. Press the black button [on the remote] with the 'TV/Musical Note symbols'. This puts you into Radio Station Mode.
2. Scroll through the Radio Channels using the Up/Down arrows in the usual way.
3. To return to TV Channel viewing, press the black button [on the remote] with the 'TV/Musical Note symbols' again.

